

INTERLAB

Tel: +331 3971 7337 - Fax: +331 3928 9008

Technical Note:

Windows audio is not playing, while Touch apps does.

Vernouillet, 23.06.03

Control Panel->

Sounds and Multimedia->

'Audio' tab->Sound playback.

Select 'Matrox digisuite wave driver'.

Note that DVD Player is not connected to the AudioSub, so CDs can't be played directly.