


8 pin MiniDin Male Pin #	9 pin SubD Male Pin #	Function
1	-	not connected
2	-	not connected
3	8	Tx D-
4	4,6	GND
5	2	Rx D-
6	3	Tx D-
7	-	not connected
8	7	Rx D+
-	1,5,9	not connected

MiniDin / RS-422 cable

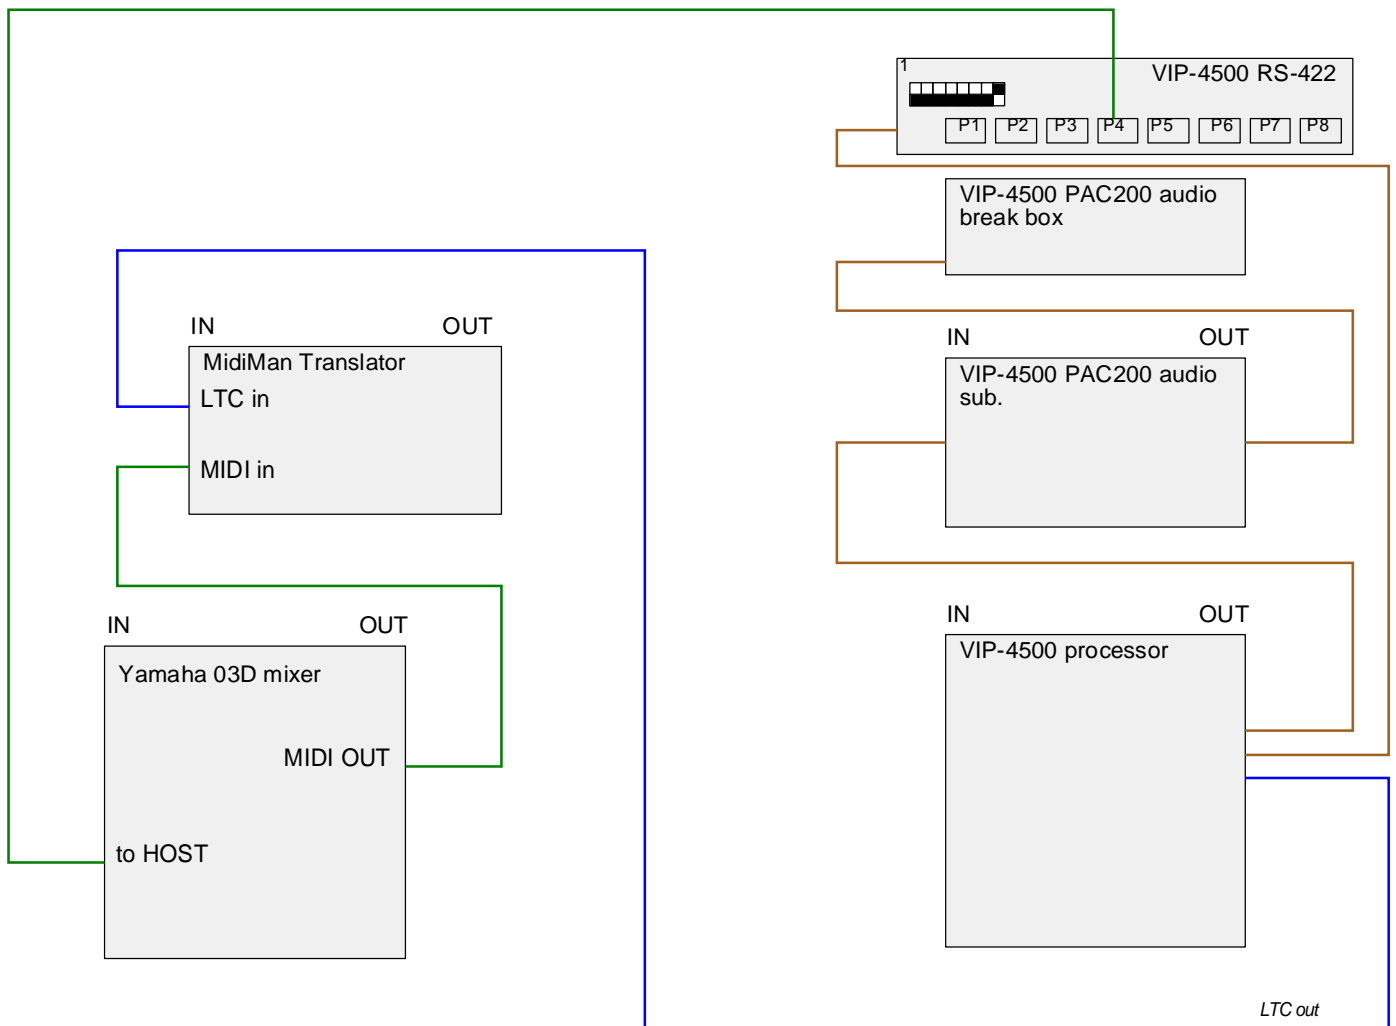

Reference: VIP USER GUIDE V3.0

A18.5.4 Configuring Control Of Yamaha 03D and 02R Audio Consoles

Add the parameter :"**yamaha_enable1**" and "**yamaha_dongle 1**" to the CONFIG.DAT file on the V.I.P system

Make sure that the dip switch on the V.I.P RS-422 Connector Box is set to "Device"

In the Audio Routing Tool, if the Connection is established, a BOX "Yamaha" appears

Details : CHECK in VIP USER MANUAL page 388

If you do not have it: Download from our site:

www.interlab-net.com H:\www\docs\lightworks\lw_user doc\vip

File: vip_yam
 Doc. Yam 03D & VIP interconnect.
 Date: 3.4.2000
 Rev. : 1.1